

# RG59 MINI QUICK STEPS



## Calibrate Cable

Once the cable is prepared, connect VoD unit then press and hold the ON/OFF button for 8 seconds. This process will take around 5 mins.

## Cable Installation

Disconnect the VoD unit, and **replace the connector in the center of the cable roll**, otherwise as you pull cable the end with the BNC connector will spin and break.

## Cable Installation following holes

For the following holes, the cable must be looped down and back up the hole, record the meter markers in and out of the holes, leaving slack in-between holes.

For further queries get in touch:  
[info@shottrack.com.au](mailto:info@shottrack.com.au)

**SHOTTRACK**

STEP  
01

STEP  
02

STEP  
03

STEP  
04

STEP  
05

STEP  
06




## Check Settings

Once calibrated, make sure the unit reads approximately 305m.

## Cable Installation First hole

The end of the cable must be looped at least 3 meters, then lowered down the first fired hole.

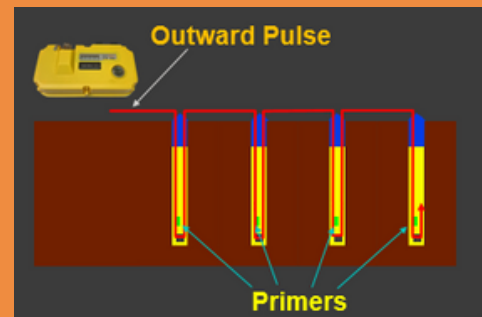

## Connect and Set

Before the blast, connect VoD unit, turn on device, make sure it reads approximately 305m. The unit will arm itself after a few minutes.



# RG59 MINI QUICK STEPS

Look for the orange dot and cut the tape to open the box



STEP  
01

Open up and remove frame



STEP  
02



STEP  
03

Retrieve cable and connector from centre hole



STEP  
04

Push the cable back through the frame and replace



STEP  
05

Close the box back up and tape



STEP  
06

The cable is now ready to use

For further queries get in touch:  
[info@shottrack.com.au](mailto:info@shottrack.com.au)

**SHOTTRACK**

Order Here

